


INSTALLATION INSTRUCTIONS FOR 12 TYPE COLLECTION BOX

(RECESSED)

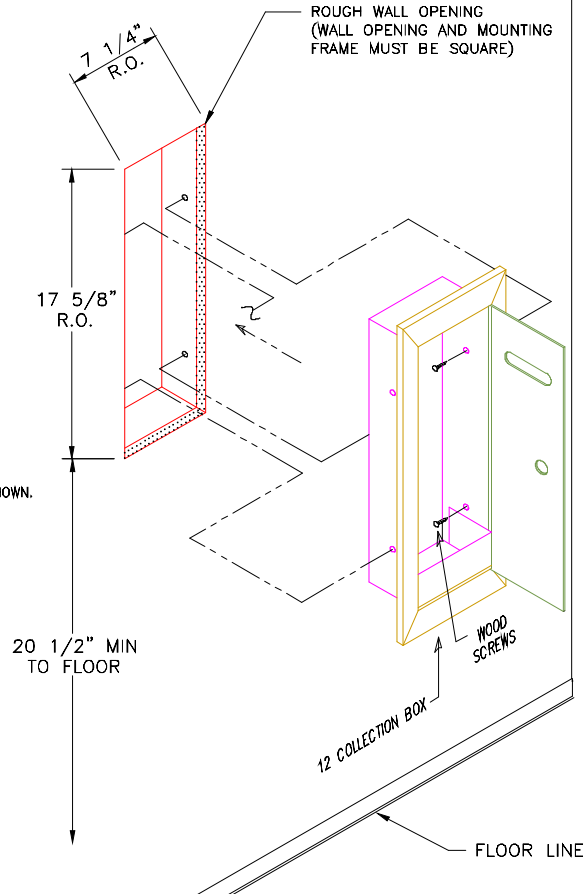

INSTALLATION NOTES FOR 12R

1. CUT AN OPENING IN THE WALL, AT A DESIRED LOCATION, IN ACCORDANCE WITH THE ROUGH OPENING DIMENSIONS AS SHOWN.
2. INSERT COLLECTION BOX INTO OPENING
3. DRILL (2) HOLES THROUGH EACH SIDE OF THE BOX INTO THE FRAME OPENING FOR #8 WOOD SCREWS
4. IF REQUIRED, REMOVE COLLECTION BOX FROM OPENING AND INSTALL ANCHORS INTO MOUNTING HOLES.
5. MOUNT COLLECTION BOX INTO OPENING USING (4) 8 1-1/4" WOOD SCREWS. (P/N 51298)

FOR PRIVATE USE ONLY

AUTH AF FLORENCE
MANUFACTURING COMPANY
5935 CORPORATE DRIVE
MANHATTAN KANSAS 66603