
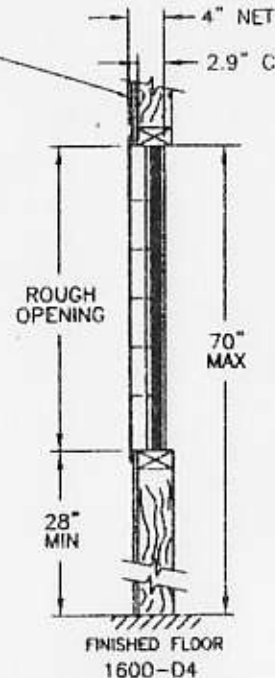


STORAGE CABINET INSTALLATION INSTRUCTIONS (FRONT LOAD)

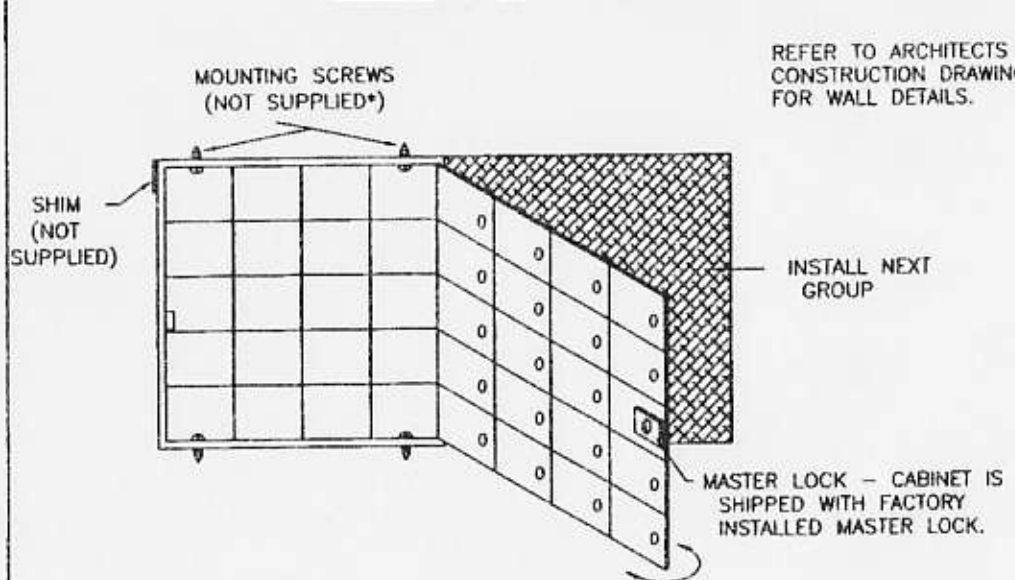

NOTE: WHEN SNAP ON TRIM IS USED, CABINET MUST PROJECT 3/8" BEYOND FINISHED WALL TO MAKE A FLUSH SURFACE BETWEEN THE CABINET AND THE TRIM, SEE OPTIONAL TRIM DETAIL.



1. SLIDE FIRST GROUP OF BOXES INTO THE ROUGH OPENING IN WALL.
2. SHIM AS NECESSARY FOR GATE TO OPEN AND CLOSE FREELY. INSTALL AND TIGHTEN MOUNTING SCREWS* (2 IN TOP AND 2 IN BOTTOM).
3. INSTALL NEXT GROUP OF BOXES THE SAME AS ABOVE.

NEXT STEPS ONLY FOR CABINETS WITH OPTIONAL SNAP ON TRIM

4. SCREW MOUNTING CLIP TO WALL USING #8 x 1-1/4" SCREWS, SEE OPTIONAL TRIM DETAIL.
5. HOOK ONE EDGE OF TRIM OVER LEG OF CLIP AND SNAP OVER SECOND LEG OF CLIP.

* FOR CONVENTIONAL LUMBER WE RECOMMEND A #8 x 2" FLAT HEAD WOOD SCREW.

OPTIONAL SNAP ON TRIM MOUNTING DETAILS

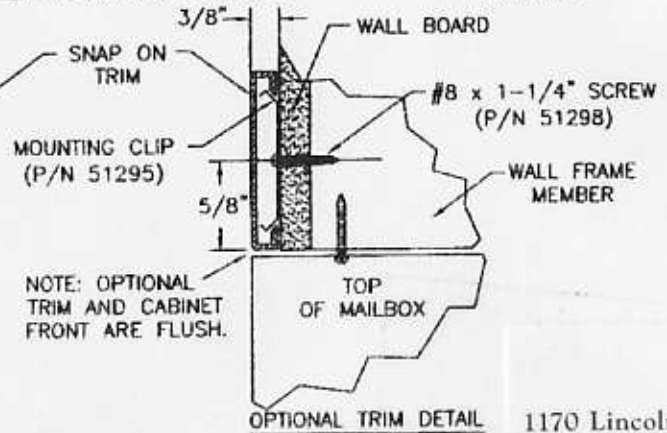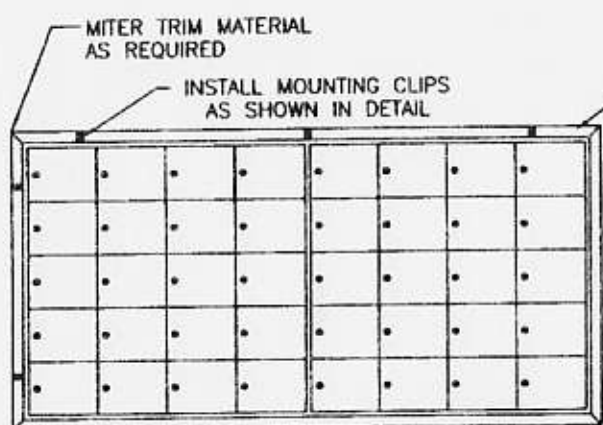

OPTIONAL TRIM DETAIL



1170 Lincoln Avenue Unit 2 • Hollbrook, NY 11741